


# Set Up Guide – V4

## Wall-to-Wall Sets

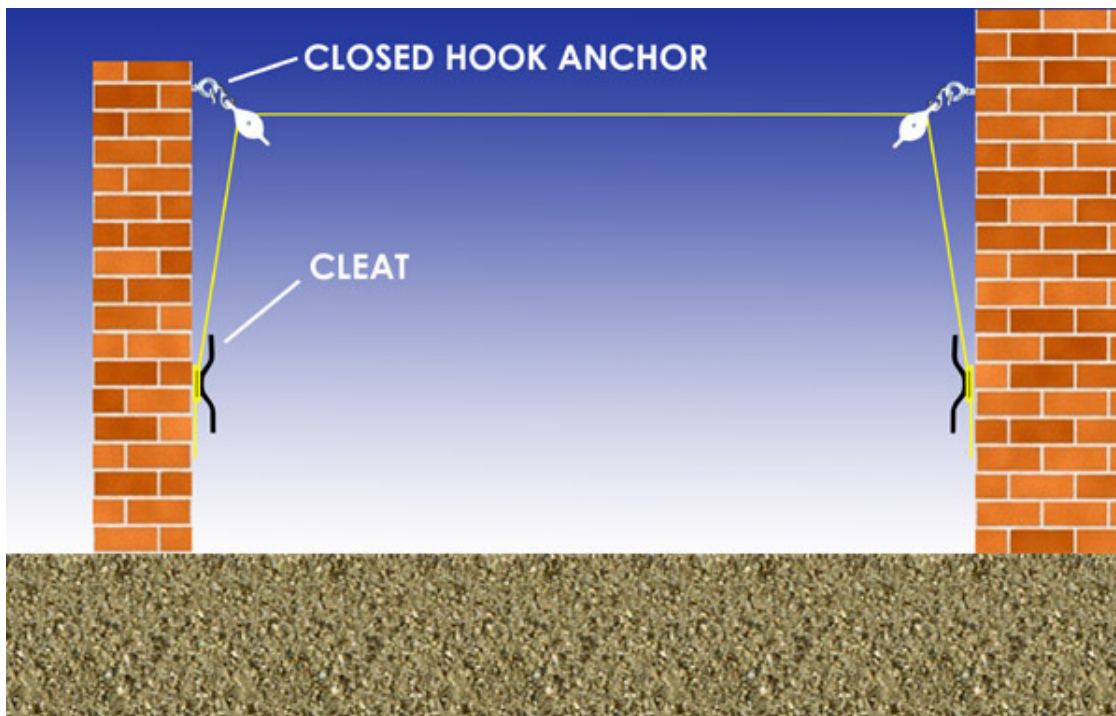

# Wall-to-Wall Set Assembly



1. Fix the closed hook anchors into the walls at your required height (typically 4m from ground level) by drilling an 8mm hole and tapping lightly with a hammer. Ensure the line will be straight and true.
2. Fix the wall cleats on to the walls about 1m from the ground using suitable fixings for the surfaces. i.e. masonry wall plugs/screws.  
\*Ensure they line up vertically with the wall hook anchors.
2. Hook the 1st single line pulley onto the wall closed hook anchor. \*You may need to open the hook slightly.
3. Pass one end of the line wire through the pulley and down to the 1<sup>st</sup> wall cleat. Wrap the end of the line wire around the 1<sup>st</sup> cleat (about 6 turns) leaving a minimum of 0.5m hanging freely.



4. Hook the 2<sup>nd</sup> single line pulley onto the 2<sup>nd</sup> wall closed hook anchor. \*You may need to open the hook slightly.
  5. Run the other end of the line wire through the 2<sup>nd</sup> wall pulley and wrap around the 2<sup>nd</sup> wall cleat loosely. **\*\*do not cut the line yet.**
  6. Unwrap the 2<sup>nd</sup> wall cleat line wire and allow the line to drop to the lowest position that you would need to hang clothes on it.  
\*Best to fill the line with clothes for this.
10. Re-wrap the line wire around the 2<sup>nd</sup> wall cleat (min 6 turns).
  11. Cut the wire as needed leaving at least 0.5m hanging free.

That's it... you are all ready to go !